

ACURITE®

**Do not return product to retail store.**  
**For Technical Assistance and product return information,**  
**please call Chaney Instrument Co. direct at:**  
**877-221-1252**

**LIMITED WARRANTY – INTERNATIONAL**

Consumer may have more remedies at law than follows. Chaney Instrument Company warrants to the owner, this product to be free from defect in material and workmanship for one year from date of purchase. CHANEY INSTRUMENT SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER ARISING IN CONTRACT OR TORT. Chaney Instrument's obligation (at its option) is limited to repair or replace this product. For in-warranty repair, send clock, accompanied by Guarantee, bearing Dealer's name and date of purchase, with \$5.00 to cover handling and postage, to:


www.chaneyinstrument.com  
 Tel: 877-221-1252  
 Made in China

Chaney Instrument Company  
 965 Wells Street  
 Lake Geneva, Wisconsin 53147

4

**Set-Up****Battery Installation**

Install 2 "AAA" (1.5v) alkaline batteries (not included) as shown on the diagram inside the battery compartment. Slide the "POWER SWITCH" to "ON."

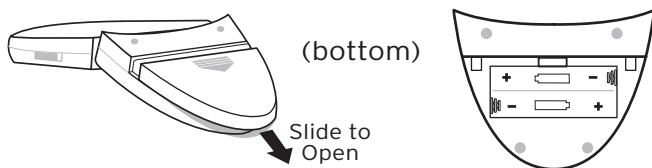**Setting the clock and thermometer**

To set the clock to the correct time, first press the "MODE" button to enter into clock display mode. Next, hold the "MODE" button down until the time display begins to flash; then you may adjust the time using the "+HR" and "-MIN" buttons. Press the "MODE" button to confirm your time setting.

At this point you may select between 12 and 24 hour time formats by pressing the "HR" button. Then you may also choose °C or °F temperature display mode by pressing the "-MIN" button. To exit set-up mode and confirm your settings, press the "MODE" button.


**Setting the target temperature**

To set the target temperature, first press the "MODE" button until the time/clock is displayed. Press the "+HR" and "-MIN" buttons to set the target temperature. Slide the "alarm on/off" switch to "on" and the alarm will sound when the actual temperature reaches the target temperature.

**Setting the timer**

To set the timer, first press the "MODE" button to select TIMER. Press the "+HR" and "-MIN" to adjust the timer to the desired countdown time. Then press "START/STOP" to start and stop the timer. The unit will beep when the countdown reaches zero. To reset the count, stop the timer first and press "+HR" and "-MIN" together at the same time.

2

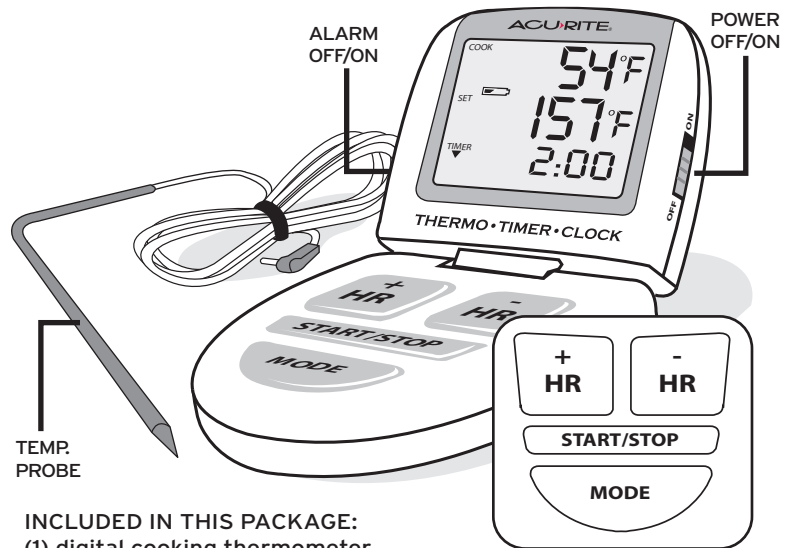

**INCLUDED IN THIS PACKAGE:**  
 (1) digital cooking thermometer  
 (1) 3 foot cord and therm. probe  
 (1) self-adhesive magnet

Main Function Buttons

Please read all instructions prior to using this instrument.

**Features**

- 3-line LCD shows cook temperature, set temperature and timer for BBQ or Oven cooking.
- Programmable temperature alert
- Programmable timer alert- MAX TIME 23 hrs. 59 mins.
- High temperature probe with 3 foot cord withstands temp. up to 700°F
- Temperature range of 32°F to 392°F (0°C to 200°C)
- Low battery indicator
- Requires 2 "AAA" Alkaline batteries (not included)

1

**Low Battery Indicator**

When this icon appears there is approximately 2 months of normal usage left.

**Button Functions Quick Reference**

Button	Press Once	Hold for 3 seconds
MODE	select timer or clock mode	set clock mode
+ ,HR	set temp. advance, HR advance	fast set temp. advance
- ,MIN	set temp decrease, MIN decrease	fast set temp. decrease
TOGETHER	resets timer when timer stopped	
START/STOP	timer start and stop	
ON/OFF	slide switch to power on and off	
ALARM	slide switch temp. alarm on and off	

**Meat-taste temperature Quick Reference**

	WELL-DONE	MEDIUM	MED.-RARE	RARE
BEEF	170°	160°	145°	140°
GROUND BEEF	160°	N/A	N/A	N/A
VEAL	170°	160°	145°	N/A
LAMB	170°	160°	145°	N/A
PORK	170°	160°	N/A	N/A
CHICKEN	180°	N/A	N/A	N/A
TURKEY	180°	N/A	N/A	N/A

3