



DayTeller™
Instruction Manual
Model Number: 00584

About the Radio - Controlled Clock (RCC)

The National Institute of Standard and Technology (NIST) in Fort Collins, Colorado broadcasts the time signal (WWVB at 60kHz AM radio signal) with an accuracy of 1 second per every 3,000 years. The signal will be able to cover over a distance up to 2,000 miles from the source. Like a typical AM radio, your RCC will not be able to receive the WWVB signal in places surrounded by heavy concrete or metal panels. The reception of the time signal is also greatly affected by electrical or electronic interference. To get the best performance of the RCC clock, please install the clock nearer to a window and change directions if one direction does not work. Refer to the "reception" section of the instructions to ensure the correct installation and the best reception.

Battery Installation and Set Up

After power up, the display will show all segments 3 seconds with one beeping. Then display 12:00pm Jan 1, 2000. The Time Zone is defaulted at PST – Pacific Standard Time

Select the correct Time Zone:

1. Press TIME ZONE key to select Pacific Time (P), Mountain Time (M), Central Time (C), Eastern Time (E)
2. Once a Time Zone is selected, your RCC will start to receive the signal
3. While the RCC is seeking for the signal, the icon will change gradually indicating the seek condition.

4. If valid signal is available, the RCC will decode the Local Time in about 3-5 minutes. The FULL tower icon and "OK" will appear on the display
5. If the first reception is not successful, the clock will attempt EVERY hour until the time is decoded.
6. If signal is not available when setting up, enter the present time and calendar by hold SET buttons 3 seconds and press +, - to enter the existing timing.

Name & Function of Buttons

1. SET

Hold SET button 3 sec to enter clock & calendar setting. Set sequence: Year > Month > Date > Hr > Min
 Press +, - to adjust, then press SET to confirm

2. TIME ZONE

Press to select the current Time Zone:
 P = Pacific Time
 M = Mountain Time
 C = Central Time
 E = Eastern Time

Hold TIME ZONE button 3 sec to trigger Daylight Saving Time on and off. Your clock is preset to DST ON. Leave the setting to ON if you want to receive the Daylight Saving Time in summer.

*In parts of Arizona and Indiana where Daylight Saving Time is not applicable, set to DST off
 (DST icon will appear on display when DST is received)

3. (+) SEEK TIME

During CLOCK setting, press (+) button for 1 step advance, hold (+) for 10 step/sec fast advance.

At normal mode, HOLD 3 seconds to get a Manual Synchronization of Atomic time signal

4. (-)
- During CLOCK settings, press (-) for 1 step backward, hold for 10 step/sec fast backward

LIMITED WARRANTY – INTERNATIONAL

Consumer may have more remedies at law than follows. Day Teller L.C. warrants to the owner, this product to be free from defect in material and workmanship for one year from date of purchase. DAY TELLER L.C. SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER ARISING IN CONTRACT OR TORT. Day Teller L.C. obligation (at its option) is limited to repair or replace this product. For technical questions call our toll-free support hotline: 1 (877) 221-1252

Features & Specifications:

- 1 WWVB Radio-Controlled Clock with 4 time zones (P, M, C, E)
- 1 Perpetual calendar with Month, Date/ Day of Week
- 1 Daylight Saving Time
- 1 12 hr clock
- 1 Battery: AA x 2 pcs

To order additional products call us at 1 800 507-2837 or visit our website at www.VanHarden.com. You can reach us by mail at the following address:

DayTeller L.C.
 511 Wisconsin Drive
 New Richmond, WI 54017

Made in China

Patent Pending