

Model #49806



1. Alarm indicator
2. Pm indicator
3. Hour set button
4. Minute set button
5. Alarm On/Off switch
6. Dimmer Hi/Low switch
7. Time set button
8. Alarm set button
9. Snooze button

To Operate Clock Blinking Display/PM Indicator/ Alarm On Indicator

When the clock is plugged in, the display will blink on and off meaning the incorrect time is being displayed. You should always check the time when this is indicated. The clock will automatically indicate AM/PM, but you must be sure to correctly set the indicator for the time and alarm. When the PM indicator is on, it is "PM"; when the PM indicator is off, it indicates "AM". When the Alarm indicator is on, the alarm will sound at the time set.

Set Time

To set the time, press the TIME SET button and the HOUR SET button until the correct hour is displayed (and the AM/PM is correct), then release the HOUR SET button and press the MINUTE SET button until the correct time is displayed.

Set Alarm

To set the alarm time, press and hold the ALARM SET button and the HOUR SET or MINUTE SET button as above. Be sure to set the AM/PM properly too.

Snooze

Touch the SNOOZE bar and get an extra 9 minutes of sleep. This may be repeated up to six times within one hour.

To Operate Alarm

Slide the ON/OFF switch located on the top of the clock up to the ON position. The alarm will sound at the time set.

To reset the alarm for the next day, momentarily press the ALARM SET button. To shut off the alarm for longer times, slide the ON/OFF switch to the OFF position.

Additional Features Available on Certain Models

Dimmer Switch - Jumbo display digital alarm clocks include a dimmer switch to control display brightness.

Battery Back-Up

(Battery not included)

Located under the clock is a battery hatch which can be easily removed. Inside is a 9 volt transistor battery connector. A battery, such as Eveready No. 216 or equivalent, may be installed or changed without unplugging the clock from the line. The battery will keep time if the power ever fails but the display will not show. Alarm will use battery power and will sound at designated time. If you have a long power failure, the clock uses an internal clock that is less accurate than the line frequency. You may need to make a slight adjustment in this case. Just follow the Time Set instructions. The alarm will be

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE REFER REPAIRS TO QUALIFIED SERVICE PERSONNEL		



This symbol is intended to alert the user to the presence of unenergized "live" parts inside the product enclosure that may be of a nature hazardous to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of user serviceable parts and maintenance instructions in the literature accompanying the appliance.

AVERTISSEMENT

Pour réduire les risques d'incendie et d'électrocution, ne laissez pas l'appareil sous la pluie ou dans l'humidité.

	ATTENTION Risque d'électrocution Ne pas ouvrir	
Attention pour réduire les risques d'électrocution n'ouvrez pas le boîtier de l'appareil. Ne laissez pas l'appareil aucune pluie, humidité ou l'humidité. Réparer l'appareil par un personnel qualifié.		



Ce symbole sert à avertir l'utilisateur qu'il y a des parties électriques dangereuses dans le boîtier de l'appareil, laquelle peut constituer un risque d'électrocution.



Ce symbole sert à avertir l'utilisateur qu'il y a des parties de l'appareil qui sont susceptibles d'être réparées par l'utilisateur. Les instructions d'entretien et de réparation sont fournies dans la documentation accompagnant l'appareil.

ADVERTENCIA

Para evitar incendios o riesgo de descarga eléctrica no exponga la unidad a la lluvia o a la humedad.

	PRECAUCION RISQUE DE DESCARGA ELECTROCUSSION	
PRECAUCION PARA REDUCIR EL RIESGO DE LESIONA ELECTRICA NO ABRIE LA CUBIERTA (O EL FONDO) ADVERTENCIA: NO EXPOGA LA UNIDAD A LA LLUVIA O LA HUMEDAD. REPARAR LA UNIDAD POR UN PERSONAL CUALIFICADO.		



Este símbolo sirve para advertir al usuario que dentro de la caja del producto hay "partes eléctricas" que constituyen un riesgo de magnitud suficiente como para constituir un peligro de descarga eléctrica para las personas.



Este símbolo sirve para advertir al usuario sobre la presencia de partes del producto que son susceptibles de ser reparadas por el usuario. Las instrucciones de funcionamiento y mantenimiento (servicio al cliente) que acompañan al artículo.

LIMITED WARRANTY INTERNATIONAL

Consumer may have more remedies at law than follows. Chaney Instrument Company warrants to the owner, this product to be free from defect in material and workmanship for one year from date of purchase. CHANEY INSTRUMENT SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER ARISING IN CONTRACT OR TORT. Chaney Instrument's obligation (at its option) is limited to repair or replace this product. For in warranty repair, send clock, accompanied by Guarantee, bearing Dealer's name and date of purchase, with \$5.00 to cover handling and postage, to:

Chaney Instrument Company
960 Wells Street
Lake Geneva, Wisconsin 53147