


## SETTING THE AUTO DAYLIGHT SAVING TIME (DST):

The following chart illustrates the differences between the auto DST settings and when each setting automatically changes the time during the year.

NEW DST	ON	OFF
<b>2006:</b> 2:00 am 1st Sunday in April 2:00 am last Sunday in October	2:00 am 1st Sunday in April 2:00 am last Sunday in October	No DST changes
<b>2007 and beyond:</b> 2:00 am 2nd Sunday in March 2:00 am 1st Sunday in November		

**AUTO DST NOTE:** portions of Indiana and Arizona do not observe daylight savings time. If you live in an area that does not observe daylight saving time, slide the "AUTO DST" switch to the "OFF" position.

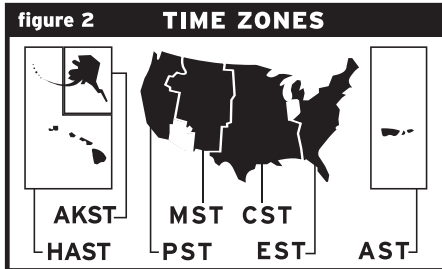

AST: Atlantic  
EST: Eastern  
CST: Central  
MST: Mountain  
PST: Pacific  
AKST: Alaska  
HAST: Hawaii- Aleutian

**Do not return product to retail store. For Technical Assistance and product return information, please call Chaney Instrument Co. direct at: 877-221-1252**

### LIMITED WARRANTY – INTERNATIONAL

Consumer may have more remedies at law than follows. Chaney Instrument Company warrants to the owner, this product to be free from defect in material and workmanship for one year from date of purchase. CHANEY INSTRUMENT SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER ARISING IN CONTRACT OR TORT. Chaney Instrument's obligation (at its option) is limited to repair or replace this product. For in-warranty repair, send clock, accompanied by Guarantee, bearing Dealer's name and date of purchase, with \$5.00 to cover handling and postage, to:

www.chaneyinstrument.com  
Tel: 877-221-1252  
Made in China

Chaney Instrument Company  
965 Wells Street  
Lake Geneva, Wisconsin 53147

4

### Main Battery Installation

Remove the battery compartment cover on the bottom of the unit and insert two "AAA" batteries in the correct manner as indicated by the polarity diagram inside the compartment.

### Backup Battery:

Your new alarm clock is equipped with a backup battery. It is unnecessary to replace the backup batteries for 3 years, as long as the main batteries are installed and functioning. We recommend the replacement of the backup batteries in two years if the main batteries are not installed. Make sure that the main batteries are fresh and the LCD is powered before changing the backup batteries.

### Changing the Backup Battery:


**Do not change the backup batteries and the main batteries at the same time. This will cause the clock to be without any power, and the internal calendar memory will no longer function properly.**

When changing the backup batteries, remove the battery compartment cover on the bottom of the unit. Loosen the screw on the inner backup battery compartment cover. Replace the two "L1142" button cell batteries with fresh ones and replace the cover.

### Setting The Time Zone and Daylight Saving Time:

1. Remove the battery compartment cover on the bottom of the unit.
2. Move the time zone selector to the desired time zone position by rotating the selector inside the battery compartment to the desired time zone (see fig. 1). Refer to the time zone chart on page 4 of this manual for a description of the different timezones. (fig. 2)
3. Slide the auto DST switch on top of the unit to the appropriate position. See the chart for an overview of each AUTO DST function.
4. Replace the battery compartment cover when finished.

figure 1

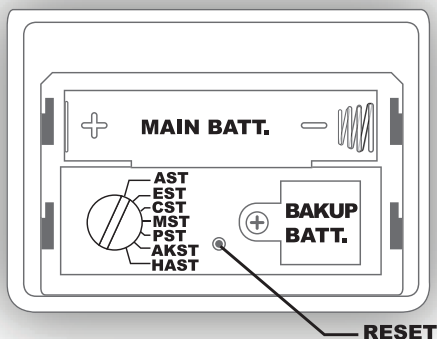

RESET



### FEATURES:

- Automatically displays the correct time, year, month, day & date once the batteries are inserted. All you need to do is select your time zone.
- Automatically resets twice a year for Daylight Saving time (DST).
- Month, date hour & minute display
- Calendar dates from January 1, 2000 to December 31, 2099.
- Main battery: 2 x AAA (Not Included).
- Backup battery: 2 x L1142 button cell batteries (included).

1

### Setting the Time

1. Press the "TIME SET" button once, the month and day display will blink.
2. Press the "HOUR/MONTH" button as many times as necessary until the correct **Month** is reached.
3. Press the "MINUTE/DAY/YEAR" button as many times as necessary until the correct **Day** is reached
4. Press the "TIME SET" button again, the year display will be blinking.
5. Press the "MINUTE/DAY/YEAR" button as many times as necessary until the correct **Year** is reached
6. Press the "TIME SET" button again, the hour & minute displays will blink.
7. Press the "HOUR/MONTH" button as many times as necessary until the desired **hour** is reached. (note the "AM / PM" indicator on the display)
8. Press the "MINUTE/DAY/YEAR" button as many times as necessary until the desired **minute** is reached

### Setting the Alarm Time

1. Press and hold the "ALARM SET" button, "AL" will blink on the display.
  2. While still holding the "ALARM SET" button, press the "HOUR/MONTH" button as many times as necessary until the desired hour is reached.
- NOTE: PAY ATTENTION TO THE AM/PM INDICATOR ON THE DISPLAY.**
3. Press the "MINUTE/DAY/YEAR" button as many times as necessary until the desired minute is reached
  4. Release the "ALARM SET" button to finish the alarm time setting procedure.

### Alarm Settings

To turn the alarm function on, slide the "ALARM" switch to the "ON" position. A small alarm clock icon will appear on the display when the alarm function is switched to the "ON" position. When the alarm sounds at the desired preset time, you can switch it off by sliding the "ALARM ON/OFF" switch to "OFF." If you do not switch the alarm off, it will continue ringing for 1 minute and then turn itself off. It will then reset and will not ring again until the next day at the same preset time.

### Snooze / Light:

Press the "snooze/Light" button to activate the 8 minute snooze alarm. The "snooze/light" button will also activate the green backlight which will remain illuminated for 4 seconds before turning itself off to conserve the batteries.