

Weather Center

model 00436/00634A1/00634A2/00634CA



CONTENTS

Unpacking Instructions	2	Sensor & Display Placement	9
Package Contents	2	Outdoor Device Installation	10
Product Registration.....	2	Using the Weather Center.....	11
Features & Benefits: Outdoor Device ..	3	Troubleshooting	12
Features: Display	4	Care & Maintenance	14
Setup	6	Specifications.....	14
Outdoor Device Setup.....	6	FCC Information	14
Display Setup.....	7	Customer Support.....	15
Set Time, Date & Units	8	Warranty.....	15

Questions? We're here to help!

Visit us online at www.acurite.com/support

SAVE THIS MANUAL FOR FUTURE REFERENCE.



Congratulations on your new AcuRite product. To ensure the best possible product performance, please read this manual in its entirety and retain it for future reference.

Unpacking Instructions

Remove the protective film that is applied to the LCD screen prior to using this product. Locate the tab and peel off to remove.

Package Contents

1. Display with tabletop stand
2. Outdoor device
3. Sensor mounting bracket
4. Mounting hardware
5. Instruction manual


IMPORTANT

PRODUCT MUST BE REGISTERED
TO RECEIVE WARRANTY SERVICE

PRODUCT REGISTRATION

Register online to receive 1-year warranty protection
www.acurite.com/product-registration

Features & Benefits

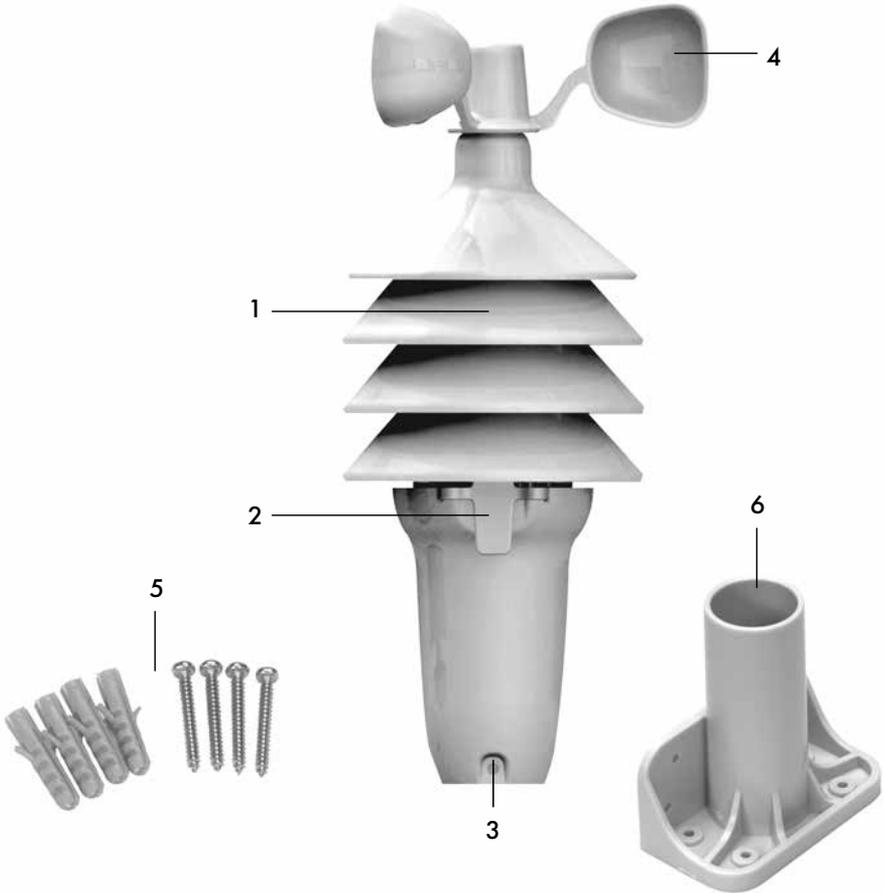

Outdoor Device

- 1. Temperature & Humidity Sensors**
(internal)
- 2. Release Lever for Battery Access**
- 3. Mounting Point**
- 4. Wind Speed Anemometer**

5. Mounting Hardware


Includes anchors and screws.

6. Mounting Bracket

- 7. A-B-C Switch** (not shown)
ID code that must match display's A-B-C switch to ensure units synchronize.

Features & Benefits

Display

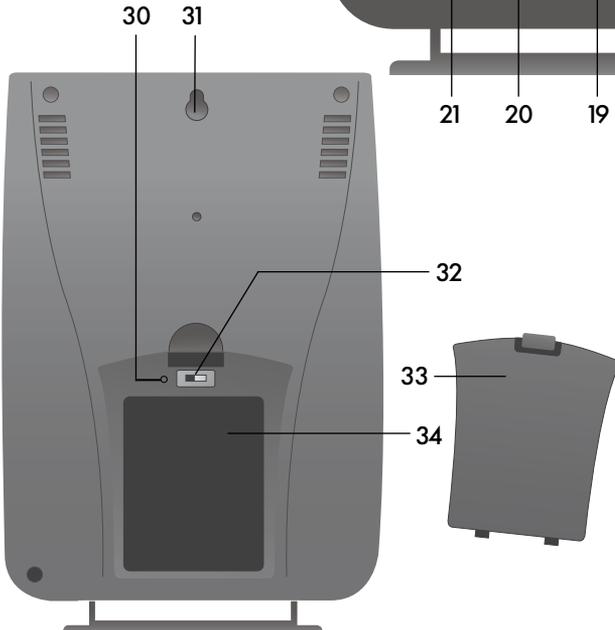

INDOOR DISPLAY

- 1. Date**
- 2. Low Battery Indicator**
- 3. Atomic Clock**

Maintains time with split-second accuracy and automatically updates for daylight saving time.
- 4. Atomic Clock Signal Strength**
- 5. Selected Time Zone**
- 6. Barometric Pressure**

Arrow icon indicates the direction the pressure is trending.
- 7. History Chart Icon**

Indicates data is currently displayed on the History Chart (22).
- 8. Moon Phase**
- 9. History Chart Icon**

Indicates data is currently displayed on the History Chart (22).
- 10. Current Outdoor Temperature**

Arrow icon indicates direction temperature is trending.
- 11. Sensor Signal Strength**
- 12. Low Sensor Battery Indicator**
- 13. Current Indoor Humidity**
- 14. High/Low Records Indicator**

Indicates whether minimum or maximum records are being shown.
- 15. Current Indoor Temperature**
- 16. Removable Tabletop Stand**
- 17. MIN/MAX Button**

Press to view high or low records for temperature and humidity.
- 18. SCALE Button**

Changes data units to either U.S. Standard Units or Metric.
- 19. HISTORY MODE Button**

Press to toggle between pressure, temperature and wind speed data on the History Chart (22).
- 20. + Button**

For setup preferences.
- 21. SET Button**

For setup preferences.
- 22. Multi-Variable History Chart**

Displays the past 12 hours of data for pressure, temperature or wind speed.
- 23. Seasonal**

Displays heat index, dew point or wind chill, depending on the current outdoor temperature.
- 24. Average Wind Speed**

Based on all wind speed readings from the past 2 minutes.
- 25. Peak Wind Speed**

Highest speed from past 60 minutes.
- 26. Current Wind Speed**
- 27. History Chart Icon**

Indicates data is currently displayed on the History Chart (22).
- 28. Learning Mode Icon**

Disappears after weather forecast self-calibration is complete.
- 29. 12 to 24 Hour Weather Forecast**

Self-Calibrating Forecasting pulls data from the outdoor sensor to generate your personal forecast.

BACK OF DISPLAY

- 30. Reset Button**

Full reset to factory defaults.
- 31. Integrated Hanger**

For easy wall mounting.
- 32. A-B-C Switch**

ID code that must match sensor's A-B-C switch to ensure units synchronize.
- 33. Battery Compartment Cover**
- 34. Battery Compartment**

Outdoor Device Setup

1 Set the A-B-C Switch

 
The A-B-C switch is located inside the battery compartment. It can be set to A, B or C. However, you must select the same letter choices for both the sensor and the display in order for the units to synchronize.

2 Install or Replace Batteries


AcuRite recommends high quality alkaline or lithium batteries for the best product performance. Heavy duty or rechargeable batteries are not recommended.

The outdoor device requires lithium batteries in low temperature conditions. Cold temperatures can cause alkaline batteries to function improperly. Use lithium batteries in the outdoor device for temperatures below -4°F / -20°C.

1. Press the release lever and pull off the lower housing of the sensor.
2. Remove the battery compartment cover. Take note of the A-B-C switch setting inside the battery compartment for step 2.
3. Insert 4 x AA batteries into the battery compartment, as shown. Follow the polarity (+/-) diagram in the battery compartment.
4. Replace the battery cover and lower housing of the sensor.

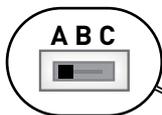

1 A-B-C Switch set to match display

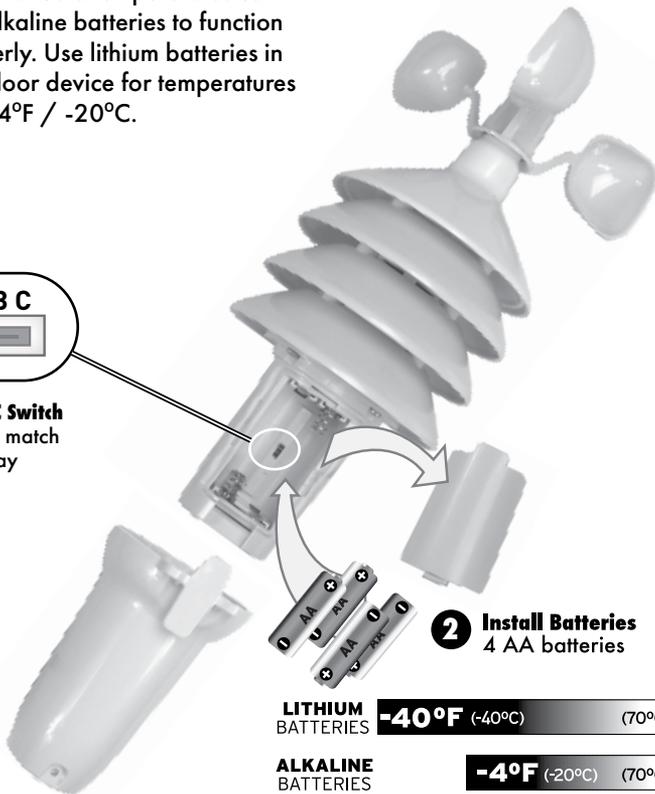

2 Install Batteries
4 AA batteries

LITHIUM BATTERIES -40°F (-40°C) (70°C) 158°F

ALKALINE BATTERIES -4°F (-20°C) (70°C) 158°F


Display Setup

1 Set the A-B-C Switch

Locate the A-B-C switch inside the battery compartment. Set the A-B-C switch to A, B or C. You must select the same letter choices for both the display and the sensor in order for the units to synchronize.

2 Install or Replace Batteries

1. Remove the battery compartment cover.
2. Insert 3 x AA alkaline batteries into the battery compartment, as shown. Follow the polarity (+/-) diagram in the battery compartment.
3. Replace the battery cover.

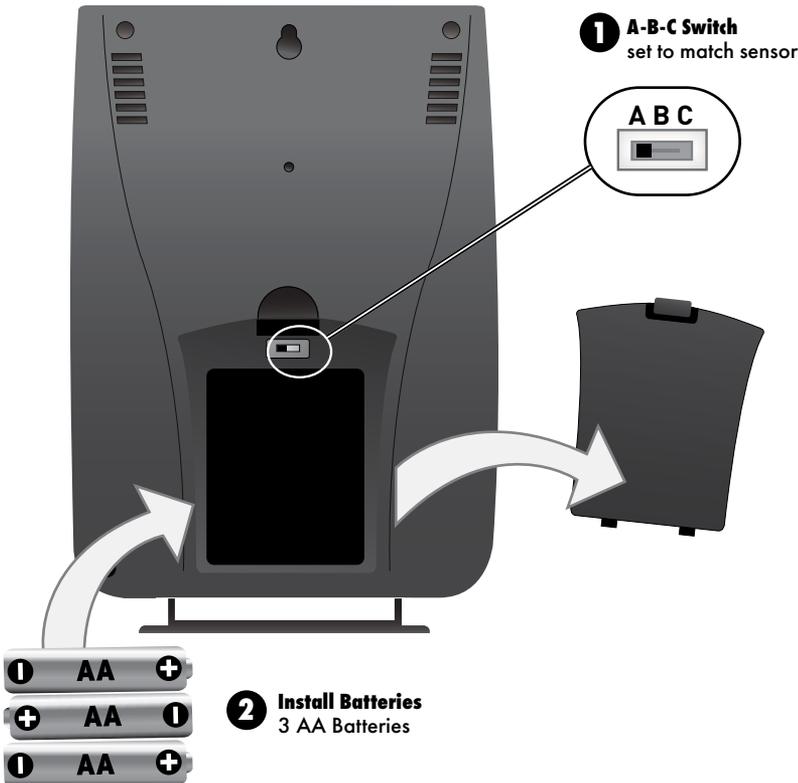

PLEASE DISPOSE OF OLD OR DEFECTIVE BATTERIES IN AN ENVIRONMENTALLY SAFE WAY AND IN ACCORDANCE WITH YOUR LOCAL LAWS AND REGULATIONS.

BATTERY SAFETY: Clean the battery contacts and also those of the device prior to battery installation. Remove batteries from equipment which is not to be used for an extended period of time. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the device. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

Atomic Clock

AcuRite atomic clocks use a radio-controlled signal to synchronize to the correct time broadcast by the National Institute of Standards and Technology (NIST) Radio Station WWVB, located near Fort Collins, Colorado. WWVB broadcasts the current time and date with split-second accuracy.

This AcuRite atomic clock and calendar will maintain the correct time and date, and automatically update for daylight saving time to provide the most accurate timekeeping standard possible.

Please note: The atomic signal generally takes a few hours to synchronize, so it is important to manually set the time and date after powering on the display.

Set the Time & Date

Press AND HOLD the "SET" button for 5 seconds to enter SET MODE. Once in set mode, the preference you are currently setting will blink on the display.

To adjust the currently selected (flashing) item, press the "+" button (press and HOLD to fast adjust).

To save your adjustments, press and release the "SET" button again to adjust the next preference. The preference set order is as follows:

TIME ZONE (PST MST CST EST AST HAT [HAST] AKT [AKST])

DST (Daylight Saving Time ON OR OFF)

CLOCK HOUR

CLOCK MINUTE

CALENDAR YEAR

CALENDAR MONTH

CALENDAR DATE

You will automatically exit SET MODE if no buttons are pressed for 30 seconds. Enter basic setup mode at any time by pressing and holding the "SET" button.

Select Measurement Units

To select between U.S. standard units or metric units, press the "SCALE" button. Please note: The "WIND SPEED" history chart only displays data in "mph".

Measurement	U.S. Standard Units	Metric
Temperature	Degrees Fahrenheit (°F)	Degrees Celsius (°C)
Barometric Pressure	inHg (inches of mercury)	hPa (Hectopascal)
Wind Speed	Miles per hour (mph)	Kilometers per hour (kph)

Placement for Maximum Accuracy

AcuRite sensors are sensitive to surrounding environmental conditions. Proper placement of both the display and the sensor are critical to the accuracy and performance of this product.



Display Placement

Place the display in a dry area free of dirt and dust. To ensure accurate temperature measurement, place out of direct sunlight and away from heat sources or vents. Display stands upright for tabletop use or is wall-mountable.



Outdoor Device Placement

The outdoor device is designed to remain outdoors all year long. Choose an open location with no obstructions above or around the sensor for the most accurate measurements.

Important Placement Guidelines

Display and sensor must be within 330 feet (100 m) of each other.

MAXIMIZE WIRELESS RANGE

Place units away from large metallic items, thick walls, metal surfaces, or other objects that may limit wireless communication.

PREVENT WIRELESS INTERFERENCE

Place both units at least 3 feet (.9 m) away from electronic devices (TV, computer, microwave, radio, etc.).

LOCATE AWAY FROM HEAT SOURCES

Position sensor away from heaters, air conditioners, chimneys, exhaust vents, asphalt and concrete (surfaces that radiate heat).

LOCATE AWAY FROM HUMIDITY SOURCES

Avoid installing the sensor near pools, spas, or other bodies of water. Water sources may impact humidity accuracy.

LOCATE AWAY FROM SPRINKLER HEADS

DO NOT install the sensor where it will be sprayed by a sprinkler system. This may force water inside the sensor.

LOCATE AWAY FROM WIND OBSTRUCTIONS

DO NOT mount the sensor with obstructions around it. Consider a location that is a wide open area, with few structures around to ensure accurate wind speed measurement.

Visit us online to view installation photos and video, or learn more about AcuRite technology:

www.AcuRite.com/3in1



View Video



Outdoor Device Installation Guidelines

INSTALLATION HEIGHT Mount the sensor at least 5 feet (1.5 meters) off the ground (higher is better for wind measurement) in an open area. Secure to fence post, 2' x 4' wood, 3/4" pole, etc. (not included)

LEVEL INSTALLATION Use a bubble level (not included) to ensure level installation for accurate wind measurement.

Top or Side Mount


1. Insert the mounting base into the hole on the bottom of the sensor.
2. Use one of the screws included in the hardware bag to fasten the lower sensor housing to the mounting base.
3. Make sure the sensor is level using a bubble level.
4. Fasten mounting base to a post or railing using 2 screws.

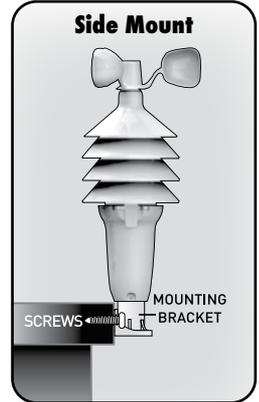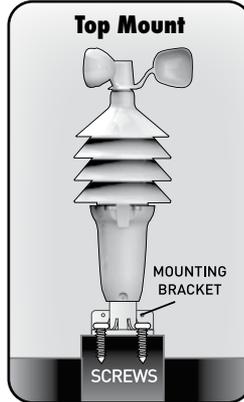

Pole Mount

1. Insert pole (we recommend 3/4" schedule 40 PVC / 25.8 mm O.D., not included) or similar item all the way into the hole on the bottom of the sensor. Note: Mounting base is not used.
2. Use one of the screws included in the hardware bag to fasten the lower sensor housing securely to the pole.
3. Make sure the sensor is level using a bubble level.

The outdoor device is now ready to use.

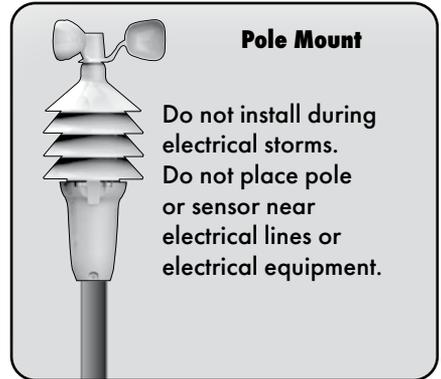

Basic Setup is Complete

The outdoor device will now synchronize with the display. It may take a few minutes for synchronization to complete. If both or one of the units appear to be functioning improperly, please refer to the troubleshooting section.


Using The Weather Center

Learning Mode

Self-Calibrating Forecasting use a unique algorithm to analyze changes in pressure over a time period (called Learning Mode) to determine your altitude. After 14 days, the Learning Mode icon disappears from the display screen. At this point, the self-calibrated pressure is tuned in to your location and the unit is ready for superior weather prediction.


Weather Forecast

AcuRite's patented Self-Calibrating Forecasting provides your personal forecast of weather conditions for the next 12 to 24 hours by collecting data from the sensor in your backyard. It generates a forecast with pinpoint accuracy - personalized for your exact location.

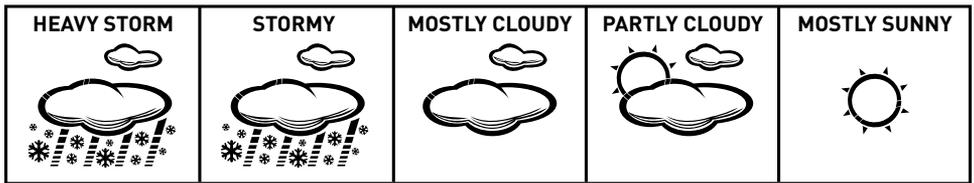

Moon Phase

Track the phases of the moon, conveyed through simple lunar phase icons.

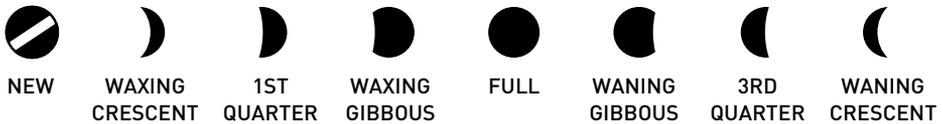

Multi-Variable History Chart

The multi-variable history chart lets you monitor the change in conditions over the last 12 hour time period (-12, -6, -3, -2, -1, 0). Toggle between barometric pressure, temperature and wind speed readings.

Wind Speed

The Wind Speed area of the display features WIND SPEED PEAK, AVERAGE and CURRENT WIND SPEED. The multi-variable history chart lets you monitor the change in AVERAGE hourly wind speed.

Barometric Pressure

Subtle variations in barometric pressure greatly impact the weather. This weather center displays the current pressure with an arrow icon to indicate the direction the pressure is trending (FALLING, STEADY, or RISING). The multi-variable history chart lets you monitor the change in pressure over time.

High & Low Records

The “MIN/MAX” button displays minimum and maximum recordings for outdoor and indoor temperature and humidity. To view the MINIMUM temperature and humidity readings, press and release the “MIN/MAX” button until the “MIN” icon appears on the display next to the low records. To view the MAXIMUM temperature and humidity readings, press and release the “MIN/MAX” button until the “MAX” icon appears on the display next to the high records.

To reset the MINIMUM records, first view the MIN records by pressing the “MIN/MAX” button until the “MIN” icon appears on the display. While viewing the MIN records, press and hold the “+” and “SCALE” buttons simultaneously for 3 seconds. Dashes will display to confirm all MIN values have been cleared.

To reset the MAXIMUM records, first view the MAX records by pressing the “MIN/MAX” button until the “MAX” icon appears on the display. While viewing the MAX records, press and hold the “+” and “SCALE” buttons simultaneously for 3 seconds. Dashes will display to confirm all MAX values have been cleared.

Troubleshooting

Problem	Possible Solution
<p data-bbox="110 967 306 1024">No outdoor sensor reception</p> 	<ul style="list-style-type: none"> <li data-bbox="387 748 937 800">• Relocate the display and/or the outdoor device. The units must be within 330 ft (100 m) of each other. <li data-bbox="387 808 976 889">• Make sure both units are placed at least 3 feet (.9 m) away from electronics that may interfere with the wireless communication (such as TVs, microwaves, computers, etc). <li data-bbox="387 898 1001 1032">• Use standard alkaline batteries (or lithium batteries in sensor when temperature is below -4°F/-20°C). Do not use heavy duty or rechargeable batteries. NOTE: It may take up to 20 minutes for display and sensor to synchronize after batteries are replaced. <li data-bbox="387 1040 990 1287">• Synchronize the units: <ol style="list-style-type: none"> <li data-bbox="402 1073 990 1125">1. Bring both the sensor and display indoors and remove at least one battery from each. <li data-bbox="402 1133 910 1159">2. Make sure the A-B-C switch on both units match. <li data-bbox="402 1167 849 1193">3. Reinstall the battery in the outdoor sensor. <li data-bbox="402 1201 756 1227">4. Reinstall battery into the display. <li data-bbox="402 1235 942 1287">5. Let the units sit within a couple feet of each other for about 20 minutes to gain a strong connection.
<p data-bbox="123 1352 293 1471">Outdoor temperature is flashing or showing dashes</p>	<p data-bbox="378 1328 955 1378">Flashing of the outdoor temperature may be an indication of wireless interference:</p> <ul style="list-style-type: none"> <li data-bbox="387 1386 1001 1495">• Make sure the A-B-C switch in the battery compartments of both the display and sensor are switched to the same letter. You may choose A, B or C; but both units must match to sync up. Sometimes changing to a different channel helps.

Troubleshooting

Problem	Possible Solution
Inaccurate forecast	<ul style="list-style-type: none">• Weather Forecast icon predicts conditions for the next 12 to 24 hours, not current conditions.• Has Learning Mode icon disappeared from the display? Learning Mode must complete before forecast and pressure will be accurate.• Allow unit to run continuously for 33 days. Battery removal or resetting the display will restart Learning Mode. After 14 days, forecast should be fairly accurate, however Learning Mode calibrates for a total of 33 days.
Inaccurate temperature or humidity	<ul style="list-style-type: none">• Make sure both the display and outdoor device are placed away from any heat sources or vents (see page 9).• Make sure both units are positioned away from moisture sources (see page 9).• Make sure outdoor device is mounted at least 5 ft off of the ground.
Inaccurate wind readings	<ul style="list-style-type: none">• What is wind reading being compared to? Pro weather stations are typically mounted at 30 ft high or more. Make sure to compare data using a sensor positioned at the same mounting height.• Check location of the sensor. Ensure it's mounted a minimum of 5 ft in the air with no obstructions around it (within several feet).• Ensure wind cups are spinning freely. If they hesitate or stop try lubricating with graphite powder or spray lubricant.
Display screen not working	<ul style="list-style-type: none">• Check that the batteries are installed correctly. Batteries may need to be replaced.• Reset the display by pressing the reset button, located on the back of the display. Date and time will need to be entered after a reset.

If your AcuRite product does not operate properly after trying the troubleshooting steps, visit www.acurite.com/support

Care & Maintenance

Display Care

Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives. Keep away from dust, dirt and moisture. Clean ventilation ports regularly with a gentle puff of air.

Outdoor Device Care

Clean the Sensor

Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives.

Insect Prevention

Insects may cause obstructions and interrupt data by nesting in or on the outdoor device. To limit this problem, spray sensor with a household insect repellent. Consult the insect repellent instructions prior to use.

Snow & Freezing Weather

The outdoor device will not be damaged by freezing conditions.

Clean the Wind Anemometer

Remove foreign matter from the outside of the sensor for free movement of the wind anemometer. If needed, use a small amount of spray lubricant, clear silicone or graphite powder on the anemometer for improved movement.

Specifications

TEMPERATURE RANGE	Outdoor: -40°F to 158°F; -40°C to 70°C
	Indoor: 32°F to 122°F; 0°C to 50°C
HUMIDITY RANGE	Outdoor: 1% to 99%
	Indoor: 16% to 98%
WIND SPEED	0 to 99 mph; 0 to 159 kph
WIRELESS RANGE	330 ft / 100 m depending on home construction materials
OPERATING FREQUENCY	433 mhz
POWER	7 x AA alkaline or lithium batteries (not included)
DATA REPORTING	Wind Speed: 18 second updates
	Outdoor temperature & humidity: 18 second updates
	Indoor temperature & humidity: 60 second updates

FCC Information

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

1- This device may NOT cause harmful interference, and

2- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.

Customer Support

AcuRite customer support is committed to providing you with best-in-class service. **For assistance**, please have the model number of this product available and visit acurite.com/support

- ▶ Installation Videos
- ▶ Register your Product
- ▶ Instruction Manuals
- ▶ Replacement Parts
- ▶ Submit Feedback & Ideas

IMPORTANT

PRODUCT MUST BE REGISTERED
TO RECEIVE WARRANTY SERVICE

PRODUCT REGISTRATION

Register online to receive 1-year warranty protection
www.acurite.com/product-registration

Limited 1-Year Warranty

AcuRite is a wholly owned subsidiary of Chaney Instrument Company. For purchases of AcuRite products, AcuRite provides the benefits and services set forth herein.

For purchases of Chaney products, Chaney provides the benefits and services set forth herein. We warrant that all products we manufacture under this warranty are of good material and workmanship and, when properly installed and operated, will be free of defects for a period of one year from the date of purchase.

Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by us, and at our sole option, be repaired or replaced by us. Transportation costs and charges for returned goods shall be paid for by the purchaser. We hereby disclaim all responsibility for such transportation costs and charges. This warranty will not be breached, and we will give no credit for products which have received normal wear and tear not affecting the functionality of the product, been damaged (including by acts of nature), tampered, abused, improperly installed, or repaired or altered by others than our authorized representatives.

Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). If we determine that repair or replacement is not feasible, we may, at our option, refund the amount of the original purchase price.

THE ABOVE-DESCRIBED WARRANTY IS THE SOLE WARRANTY FOR THE PRODUCTS AND IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. ALL OTHER WARRANTIES OTHER THAN THE EXPRESS WARRANTY SET FORTH HEREIN ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTY OF MERCHANTABILITY AND THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

We expressly disclaim all liability for special, consequential, or incidental damages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

We further disclaim liability from personal injury relating to its products to the extent permitted by law. By acceptance of any of our products, the purchaser assumes all liability for the consequences arising from their use or misuse. No person, firm or corporation is authorized to bind us to any other obligation or liability in connection with the sale of our products. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this warranty unless done in writing and signed by a duly authorized agent of ours.

In no case shall our liability for any claim relating to our products, your purchase or your use thereof, exceed the original purchase price paid for the product.

Applicability of Policy

This Return, Refund, and Warranty Policy applies only to purchases made in the United States and Canada. For purchases made in a country other than the United States or Canada, please consult the policies applicable to the country in which you made your purchase. Additionally, this Policy applies only to the original purchaser of our products. We do not and do not offer any return, refund, or warranty services if you buy products used or from resale sites such as eBay or Craigslist.

Governing Law

This Return, Refund, and Warranty Policy is governed by the laws of the United States and the State of Wisconsin. Any dispute relating to this Policy shall be brought exclusively in the federal or State courts having jurisdiction in Walworth County, Wisconsin; and purchaser consents to jurisdiction within the State of Wisconsin.

ACU RITE®

www.AcuRite.com