

FEATURES:

- Automatically displays the correct time, year, month, day & date once the unit is plugged in. All you need to do is select your time zone.
- Automatically resets twice a year for Daylight Saving Time (DST).
- Backup battery for Set & Forget functions:
 - 4 x AG13/LR44 button cell batteries (included).

SET & FORGET® 

SET-UP

Plug the unit into your AC wall electrical outlet using the attached corded plug.

BACKUP BATTERY:

Your new alarm clock is equipped with a backup battery. It is unnecessary to replace the backup batteries for 3 years, as long as the unit is plugged in and functioning.

We recommend the replacement of the backup batteries in two years if the unit is not plugged in. Make sure that the unit is plugged in and the LED time display is powered before changing the backup batteries.

CHANGING THE BACKUP BATTERY:

Do not change the backup batteries if the unit is not plugged in. This will cause the clock to be without any power, and the internal calendar memory will no longer function properly.

When changing the backup batteries, remove the battery compartment cover on the back of the unit. Loosen the screw on the backup battery compartment cover.

Replace the four "AG13/LR44" button cell batteries with fresh ones and replace the cover.

NOTE: The back-up battery does not power the clock in the event of a power outage. The back-up battery system only provides power to the internal clock and calendar for the Set & Forget clock function when the unit is not plugged in.

SETTING THE TIME ZONE AND DAYLIGHT SAVING TIME (DST):

TIMEZONE: Move the time zone selector to the desired time zone position by sliding the selector on the back of the unit to the desired time zone. Refer to the time zone chart on page 4 of this manual for a description of the different time zones.

AUTO DST: To turn the AUTO DST function on or off, press the "DST on/off" button and use the "+" or "-" buttons to select "doN" (ON) or "doF" (OFF). Slide the DST switch on the back of the unit to the desired mode position (OLD or NEW) See the chart on page 3 for an overview of each AUTO DST setting.

SETTING THE ALARM TIME:

1. Press and release the "ALARM SET" button once, the hour will blink on the display.
2. Press the "-" or "+" buttons to adjust the hour.

NOTE: PAY ATTENTION TO THE PM INDICATOR ON THE LEFT SIDE OF THE DISPLAY.

3. Press the "ALARM SET" button again, the minutes will blink on the display.
4. Press the "-" or "+" buttons to adjust the minutes.

ALARM SETTINGS

To turn the alarm function on, slide the "ALARM ON/OFF" switch to the "ON" position. A small indicator will appear on the display when the alarm function is switched to the "ON" position. When the alarm sounds at the desired preset time, you can switch it off by sliding the "ALARM ON/OFF" switch to "OFF."

SNOOZE:

Press the "snooze" button to activate the 10 minute snooze alarm. The snooze function can be activated up to 4 times, after the fourth time the alarm will no longer sound until the next day at the preset alarm time.

SETTING THE TIME MANUALLY

If you wish to set the clock forward or back from the actual time, follow this procedure. If the clock ever loses time for whatever reason, you may also follow this procedure to set the unit to the correct time.


1. Press and Hold the "**DST on/off**" button for **5 seconds**. The hour will begin to blink.
2. Press the "+" or "-" buttons to adjust the **hour**.
3. Press the "DST on/off" button to move on. The minutes will begin to blink.
4. Press the "+" or "-" buttons to adjust the **minutes**.
5. Press the "DST on/off" button to move on. The month will begin to blink.
6. Press the "+" or "-" buttons to adjust the **month**.
7. Press the "DST on/off" button to move on. The day will begin to blink.
8. Press the "+" or "-" buttons to adjust the **day**.
9. Press the "DST on/off" button to move on. The year will begin to blink.
10. Press the "+" or "-" buttons to adjust the **year**.

DST SETTINGS

The following chart illustrates the differences between the auto DST settings and when each setting automatically changes the time during the year.

NEW DST	OLD DST	OFF
2007 and beyond: 2:00 am 2nd Sunday in March 2:00 am 1st Sunday in November	2006: 2:00 am 1st Sunday in April 2:00 am last Sunday in October	No DST changes


AUTO DST NOTE: portions of Indiana and Arizona do not observe daylight savings time. If you live in an area that does not observe daylight saving time, please turn off DST function.

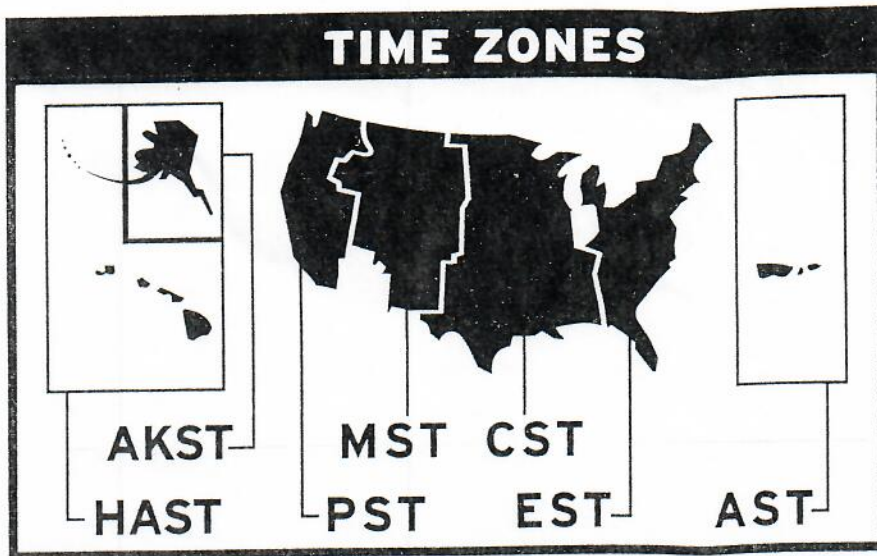

AST: Atlantic
EST: Eastern
CST: Central
MST: Mountain
PST: Pacific
AKST: Alaska
HAST: Hawaii- Aleutian

Do not return product to retail store. For Technical Assistance and product return information, please call Chaney Instrument Co. direct at:

877-221-1252

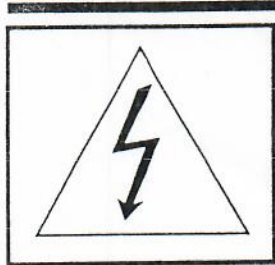

CAUTION

RISK OF ELECTRIC SHOCK-DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER(OR BACK)
 NO USER SERVICEABLE PARTS INSIDE
 REFER SERVICING TO QUALIFIED SERVICE PERSONAL



CAUTION: To prevent electric shock, do not use this plug with an extension cord, receptacle, or any other outlet unless the blades can be fully inserted to prevent blade exposure. **WARNING:** To prevent fire or shock hazard, do not expose the unit to rain or moisture.

LIMITED WARRANTY – INTERNATIONAL

Consumer may have more remedies at law than follows. Chaney Instrument Company warrants to the owner, this product to be free from defect in material and workmanship for one year from date of purchase. CHANEY INSTRUMENT SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER ARISING IN CONTRACT OR TORT. Chaney Instrument's obligation (at its option) is limited to repair or replace this product. For in-warranty repair, send clock, accompanied by Guarantee, bearing Dealer's name and date of purchase, with \$5.00 to cover handling and postage, to:

www.chaneyinstrument.com
 Tel: 877-221-1252
 Made in China

Chaney Instrument Company
 965 Wells Street
 Lake Geneva, Wisconsin 53147